

IPS Higeno Wash Hand Basin



Higeno is a frameless one-piece unit with minimal edges. Formed with seamless corners and flush recessed doors, this unit has fewer recesses and reduces the risk of bacteria growth.

The lockable flush access panels ensure maintenance is simple, while the unbroken section between houses the sanitary and brassware ensuring no water ingress.

Manufactured in our UK factory, it is delivered as a complete unit with sanitary and brassware attached so that the unit is quickly installed.

It can be specified in Polyrey anti-bacterial laminate and manufactured in bespoke sizes.

LOCKS

Key Lock






Tool Lock



Tool lock with toilet seat cover



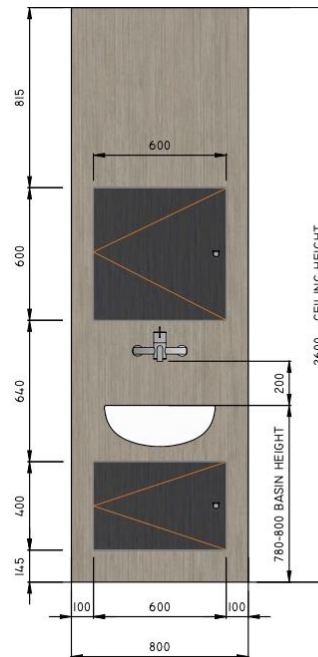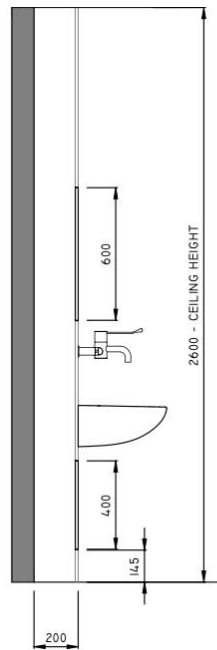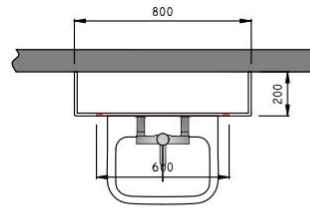

Specification

- Available as Boxed out module, Between walls module, Corner Module, Aperture module, In line module with pre-plumbed sanitaryware.
- Access Panels: Flush 13mm Compact grade laminate panels fitted to compact grade laminate surrounds.
- Access Panel Edge Treatment: Rebated panels edge (black)
- Access: Flush Panels with robust hinge.
- Surrounds: Postformed 13mm Compact grade laminate box unit with reinforced corners.
- Fixings: L Brackets to secure to wall.
- Lock: Budget lock.
- Dimensions:
 - o Height: 1500-2800mm
 - o Width: 600-900mm
 - o Depth: 100-300mm
- Colour Options: Colour chart available on request. Available with Polyrey antibacterial Sanitized