

## IPS Lindo Wash Hand Basin


---



Lindo is a metal framed; factory assembled Compact Laminate panel set with lift/pull off access panels. Its seamless corners and tight fitted panels are easy to clean and impervious to spills.

Manufactured in our UK factory, it is delivered as a complete unit with panels, sanitary and brassware attached so that the unit is quickly installed. Return ends are supplied where required to achieve a box-out unit.

It can be specified in Polyrey anti-bacterial laminate and manufactured in bespoke sizes.

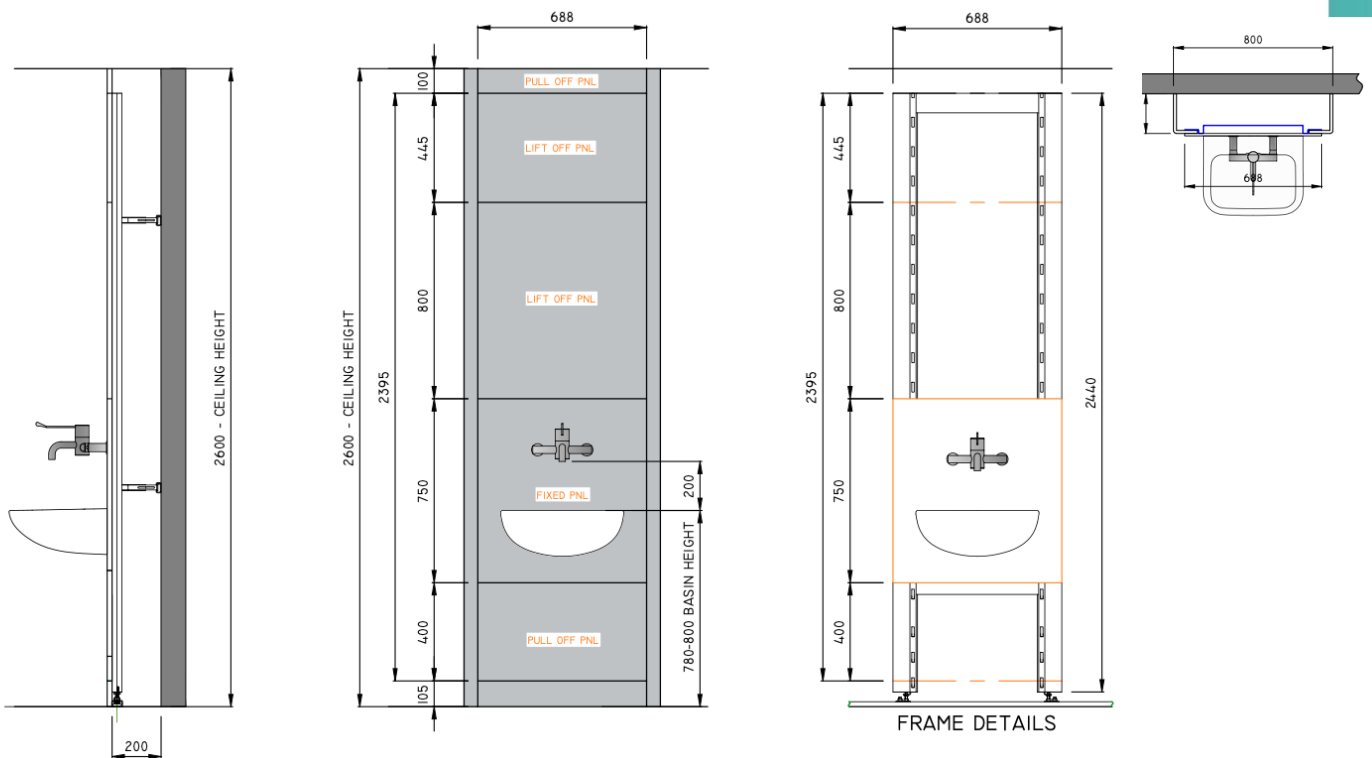

## Specification

- Available as Boxed out module, Between walls module, Corner Module, Aperture module, In line module with pre-plumbed sanitaryware.
- Access Panels: 13mm Compact grade laminate panels factory mounted onto pre-built sub frame.
- Access Panel Edge Treatment: Radiused and polished edge (black)
- Frame: 16-gauge galvanised steel sub frame..
- Access: Panels with keku 'lift off' or 'pull off' clips.
- Surrounds: Compact grade laminate surrounds and Postformed compact grade laminate return ends fixed to panel sub-frame
- Fixings: Supplied with adjustable frame to wall ties and floor and wall brace uni-strut. Precise height managed from frame mounted adjustable galvanised threaded foot
- Dimensions:
  - o Height: 1500-2800mm
  - o Width: 600-900mm
  - o Depth: 100-300mm
  - o Skirting: 100mm high compact grade laminate skirting.
- Colour Options: Colour chart available on request. Available with Polyrey antibacterial Sanitized hygienic laminate.