

IPS Purito Wash Hand Basin



Purito is a frameless one-piece unit with minimal edges. Formed with seamless corners and flush recessed doors, this unit has fewer joints and reduces the risk of bacteria growth.

The lockable flush access panels ensure maintenance is simple, while the unbroken section between houses the sanitary and brassware ensuring no water ingress.

Manufactured in our UK factory, it is delivered as a complete unit with sanitary and brassware attached so that the unit is quickly installed.

The unique recycled panel material is hygienic, impervious to water, and resistant to bacteria due to the biomaster antimicrobial technology proven to reduce the growth of harmful bacteria.

LOCKS

Key Lock




Tool Lock



Tool lock with toilet seat cover



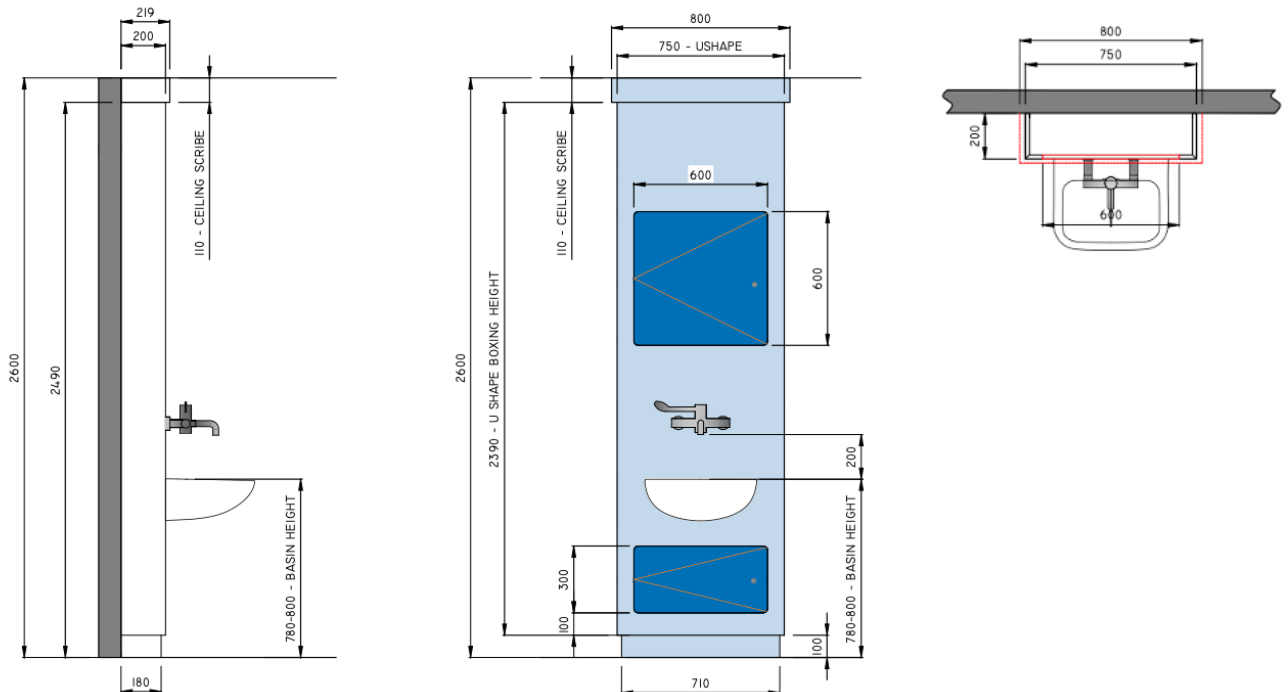

Specification

- Available as Boxed out module, Between walls module, Corner Module, Aperture module, In line module with pre-plumbed sanitaryware.
- Access Panels: 16mm flush Biomaster Antibacterial, coextruded U-PVC/PVC sandwich board.
- Access Panel Edge Treatment: Rebated panels
- Access: Flush Panels with robust hinge.
- Surrounds: 16mm flush Biomaster Antibacterial, coextruded U-PVC/PVC sandwich board with seamless formed corners.
- Fixings: L Brackets to secure to wall.
- Lock: Budget lock.
- Dimensions:
 - o Height: 1500-2400mm
 - o Width: 600-900mm
 - o Depth: 100-300mm
 - o Ceiling Scribe: 110mm.
 - o Skirting: 100mm high plinth to receive floor covering.

Colour Options: Colour chart available on request.