

## IPS Sanito Wash Hand Basin



Sanito is a metal framed; factory assembled compact laminate panel set with unique recessed pivot hinged and lockable access panels. Its seamless corners and tight fitted panels are easy to clean and impervious to spills.

Manufactured in our UK factory, it is delivered as a complete unit with panels, sanitary and brassware attached so that the unit is quickly installed. Return ends are supplied where required to achieve a box-out unit.

It can be specified in Polyrey anti-bacterial laminate and manufactured in bespoke sizes.

### LOCKS

Key Lock




Tool Lock



Tool lock with toilet seat cover



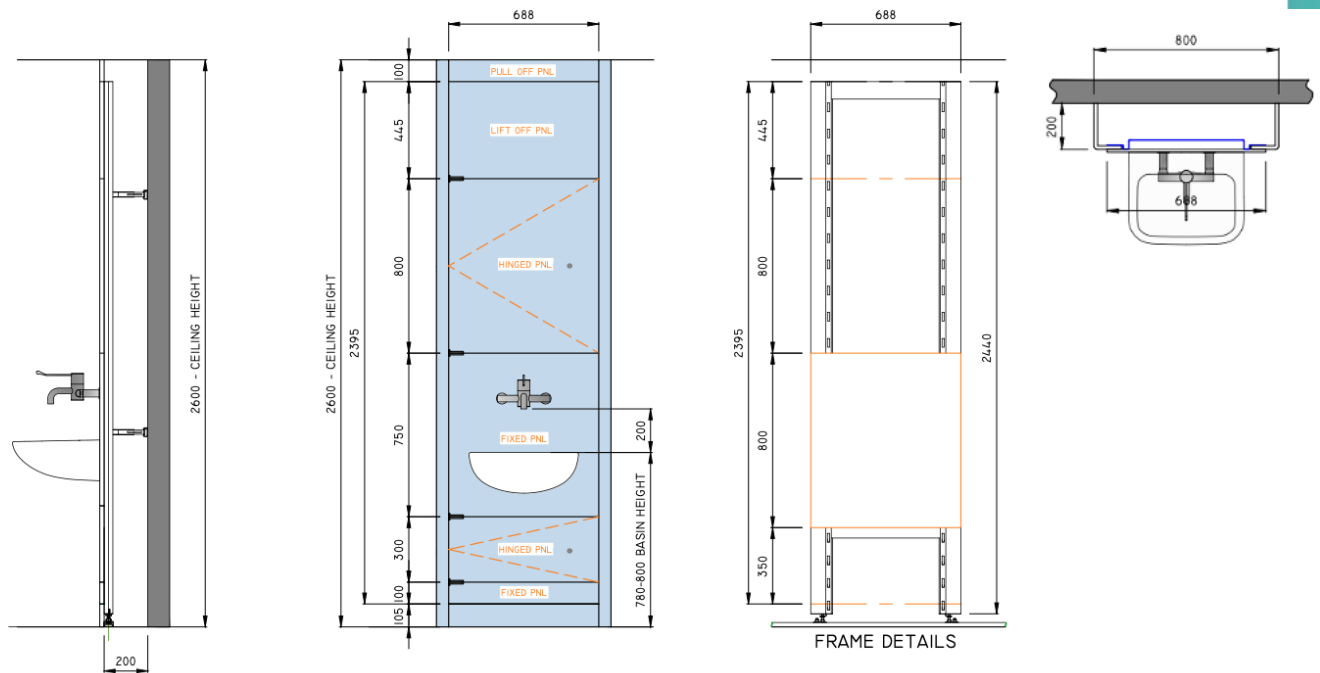

## Specification

- Available as Boxed out module, Between walls module, Corner Module, Aperture module, In line module with pre-plumbed sanitaryware.
- Access Panels: 13mm Compact grade laminate panels factory mounted onto pre-built sub frame.
- Access Panel Edge Treatment: Radiused and polished edge (black)
- Frame: 16-gauge galvanised steel sub frame.
- Access: Panels keku 'lift off' or 'pull off' clips and pivot hinged access panel.
- Surrounds: Compact grade laminate surrounds and Postformed compact grade laminate return ends fixed to panel sub-frame
- Fixings: Supplied with adjustable frame to wall ties and floor and wall brace uni-strut. Precise height managed from frame mounted adjustable galvanised threaded foot
- Lock: Budget lock.
- Dimensions:
  - o Height: 1500-2800mm
  - o Width: 600-900mm
  - o Depth: 100-300mm
  - o Skirting: 100mm high compact grade laminate skirting.
- Colour Options: Colour chart available on request. Available with Polvrev antibacterial Sanitized