

IPS Tecto Wash Hand Basin



Tecto is a frameless one-piece unit with minimal edges. Formed from hygienic cladding over a plywood core with seamless corners and recessed doors, this unit has fewer recesses and reduces the risk of bacteria growth.

The lockable access panels ensure maintenance is simple, while the unbroken section between houses the sanitary and brassware ensuring no water ingress.

Manufactured in our UK factory, it is delivered as a complete unit with sanitary and brassware attached so that the unit is quickly installed.

It can be specified in a wide range of colours and manufactured in bespoke sizes.

LOCKS

Key Lock




Tool Lock



Tool lock with toilet seat cover



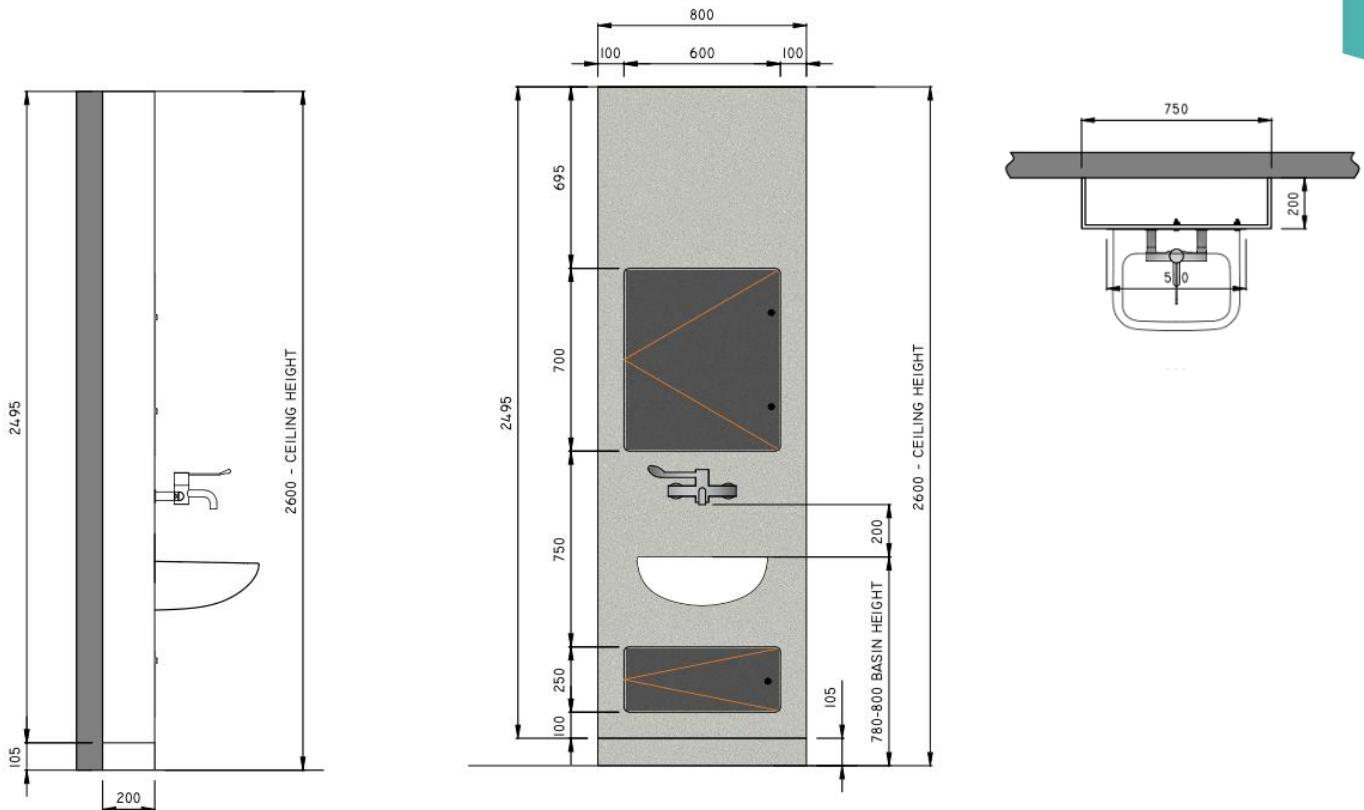

Specification

- Available as Boxed out module, Between walls module, Corner Module, Aperture module with pre-plumbed sanitaryware.
- Access Panels: 12mm FSC/PEFC WBP plywood clad with 2.5mm hygienic wall cladding face.
- Access Panel Edge Treatment: Polished
- Access: Semi Flush Panels with robust hinge.
- Surrounds: 12mm FSC/PEFC WBP plywood clad with continuous 2.5mm hygienic wall cladding face.
- Fixings: Seated onto flooring plinth and fixed back to wall with galvanised steel bracket system supplied.
- Lock: Budget lock..
- Dimensions:
 - o Height: 1500-2800mm
 - o Width: 600-900mm
 - o Depth: 100-300mm
 - o Skirting: 100mm high structural plinth to receive floor covering.
- Colour Options: Colour chart available on request.